


### Special Towing and Roadside Rules for the Nissan GT-R

The Nissan GT-R is a 3.8L Twin Turbo V6. 480 HP, AWD with 20" aluminum run flats

Tow

- Special tow hook, located under the floorboard of the passenger side.

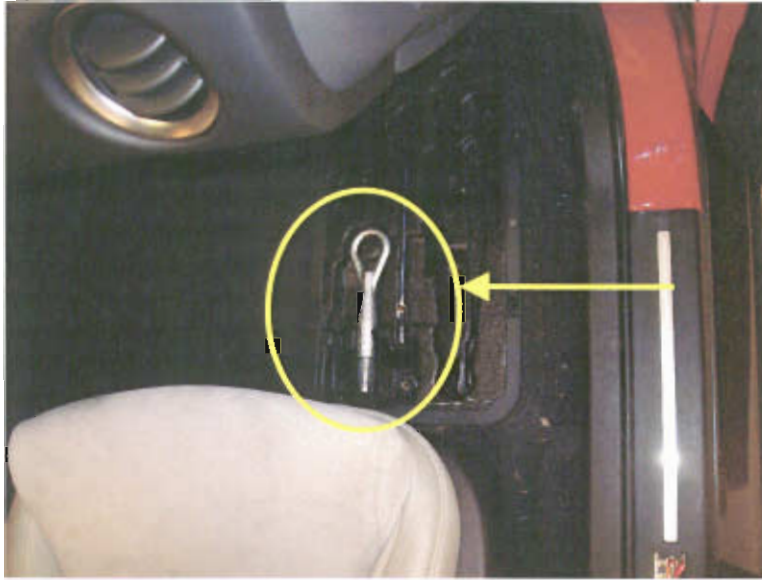

- Tow hook is then screwed into the nose of the vehicle (removing small access panel first)




- No hooks should be used to tie down vehicle to flatbed. Use of web straps is recommended (to prevent damage).

Unlock (as relates to jump start with no access to interior of vehicle)

- If the car is locked and battery is dead, the Intelligent key will not open the vehicle (to gain access to the hood release).

- Inside the driver's side door handle, a Philips screwdriver can be used to remove the screw located within.
- After screw is removed, the actual key contained within the Intelligent key can be used to unlock the door, therefore gaining access to vehicle.

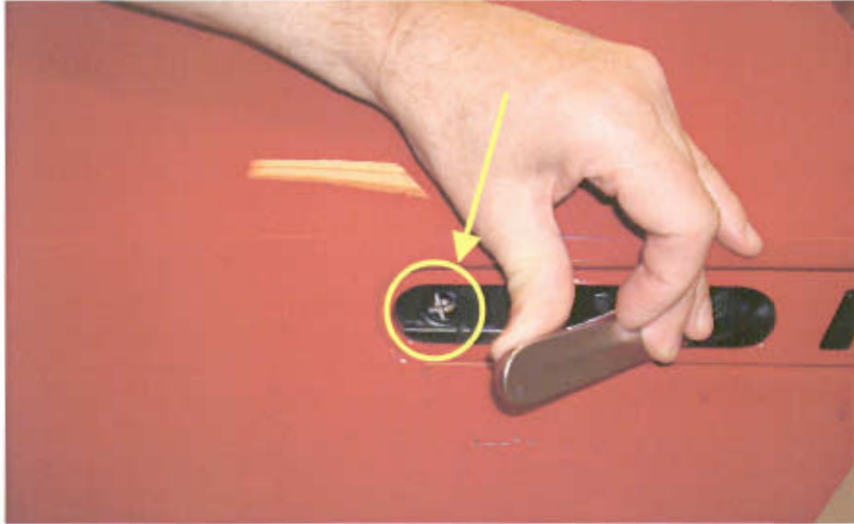

#### Manual Trunk Release

- Manual trunk release is located under the floorboard, passenger side of vehicle



### Battery Location

- Battery is located passenger side, nearest windshield, in the engine compartment



### Winching

- Before vehicle can be winched, the VDC (Vehicle Dynamic Control) should be switched to "Off"



## Tires

- ❑ Tires are nitrogen filled run flats
- ❑ Vehicles come with NO spare

